


# VICTOR


## ASSEMBLING INSTRUCTIONS

---

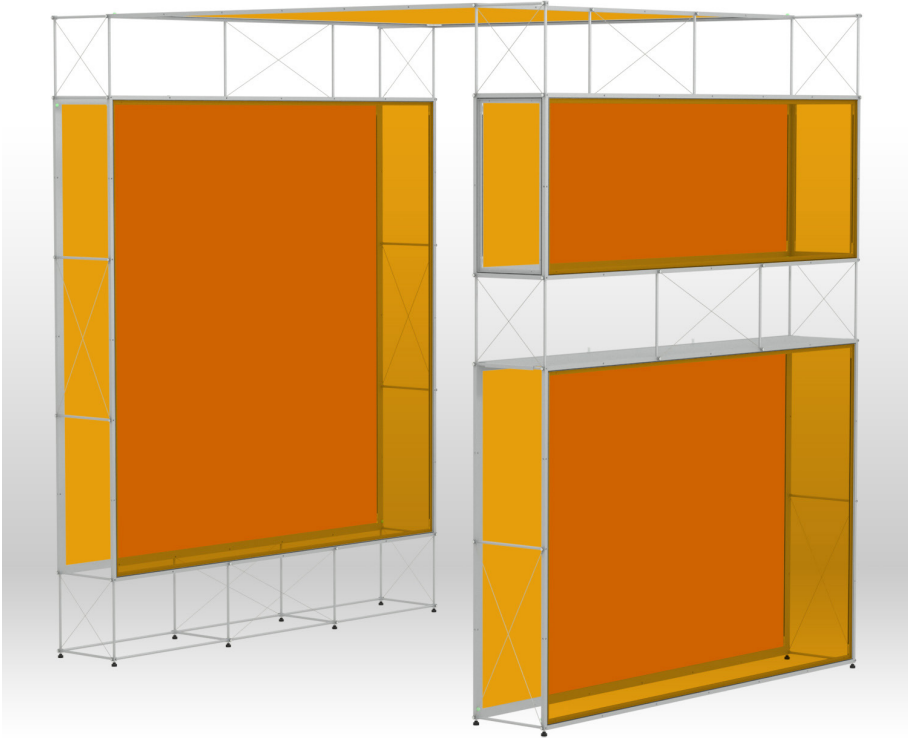





**OPEN BOX 1**

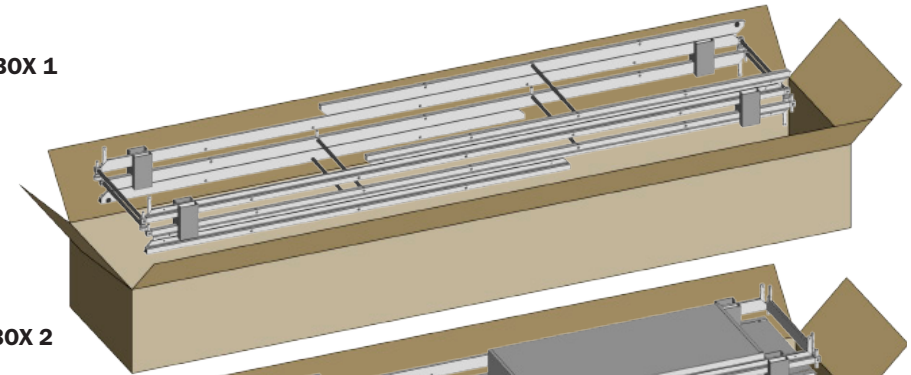

**OPEN BOX 2**

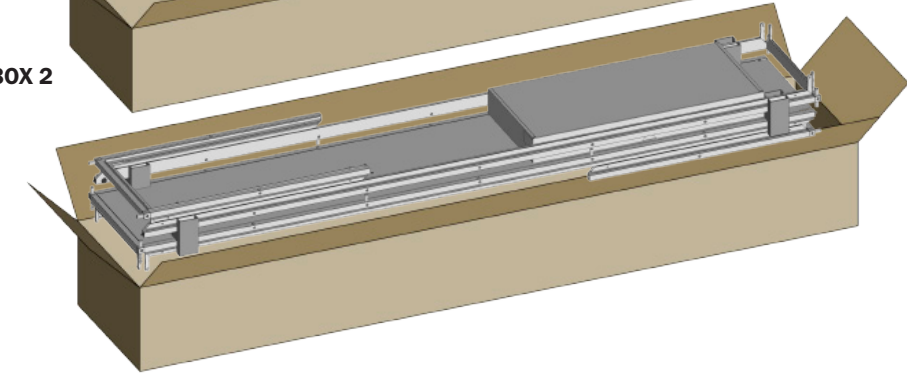

**4 CLIC UP FRAMES**

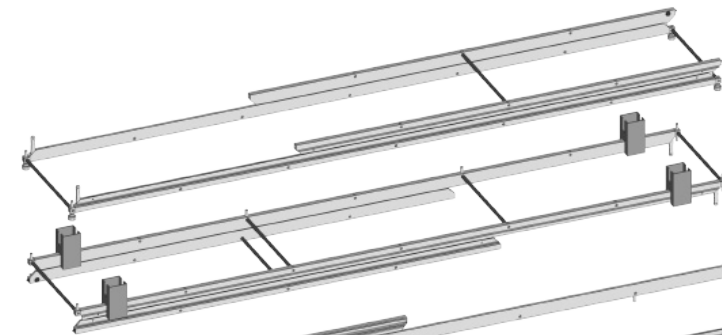


**VI-01**

**VI-02**

**VI-03**

**MATERIAL BOX**

**VI-04**

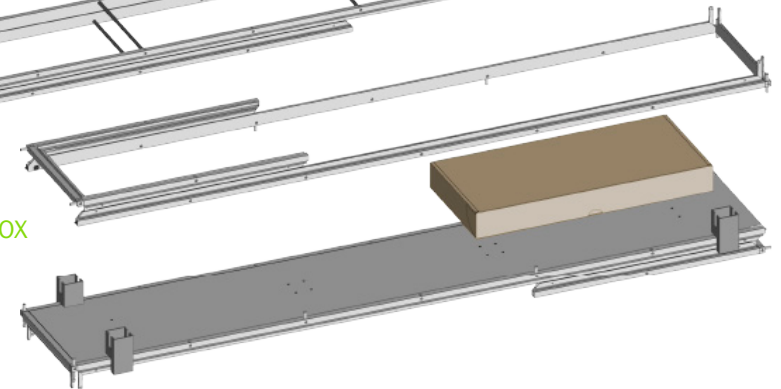


# VICTOR

## ASSEMBLING INSTRUCTIONS




**1**

UNFOLD VI-01 / VI-02

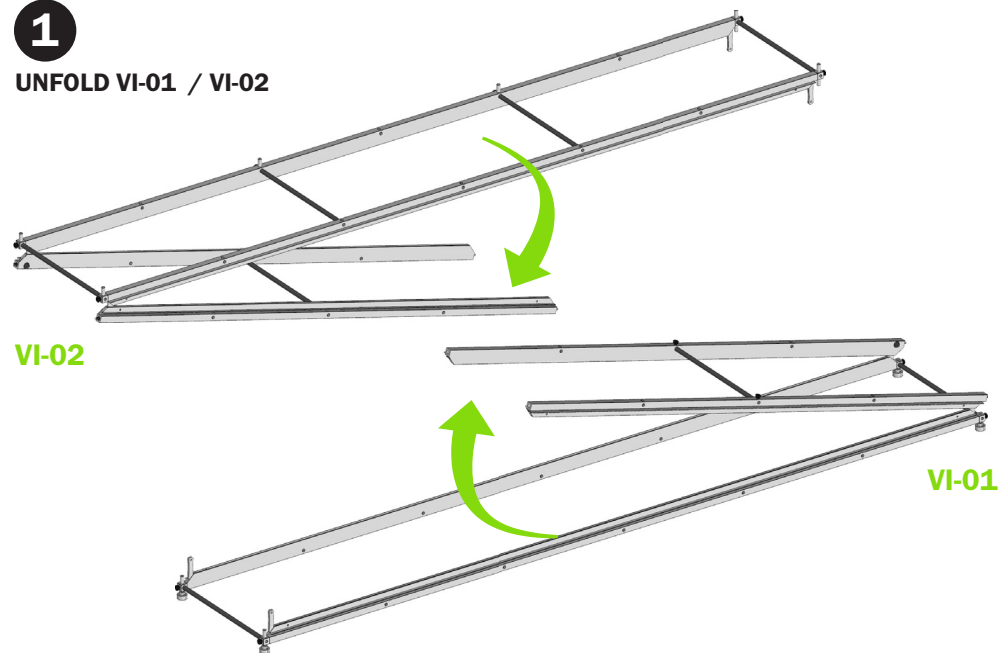

**3**

CONNECT CLIC TUBES  
MAGNETICALLY WITH FRAME


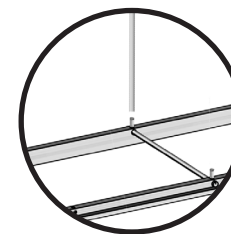


**MATERIAL BOX WITH:**  
clic cubes,  
height adjusters  
tubes A600 x  $\varnothing$ 10 mm  
tubes A300 x  $\varnothing$ 10 mm

A300 mm

**2**


CONNECT VI-01 / VI-02

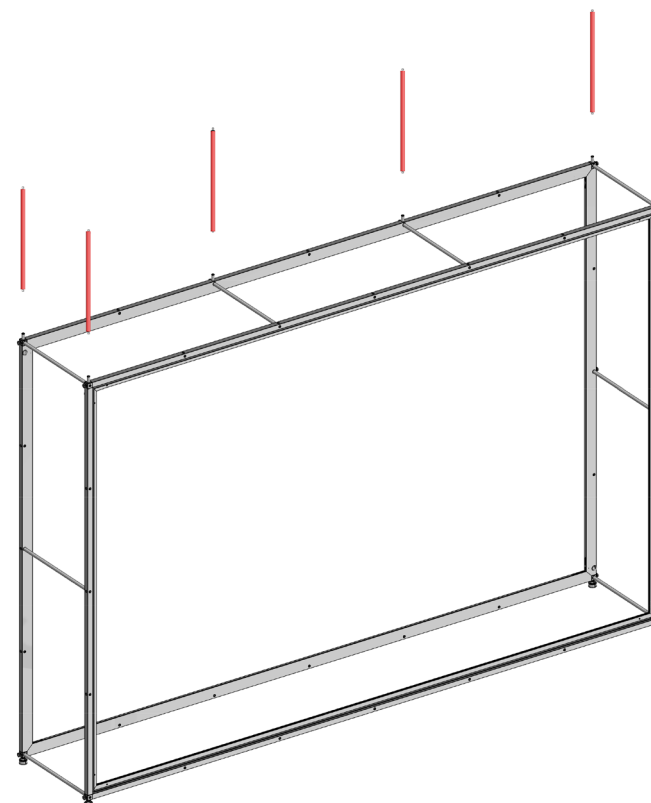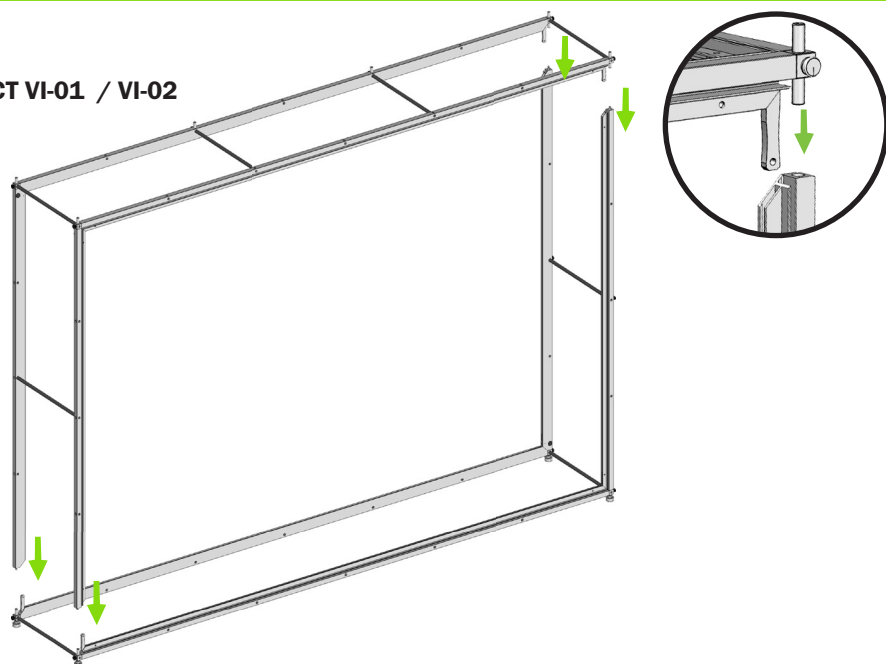



**4**


**CONNECT VI-03 TO TUBES**

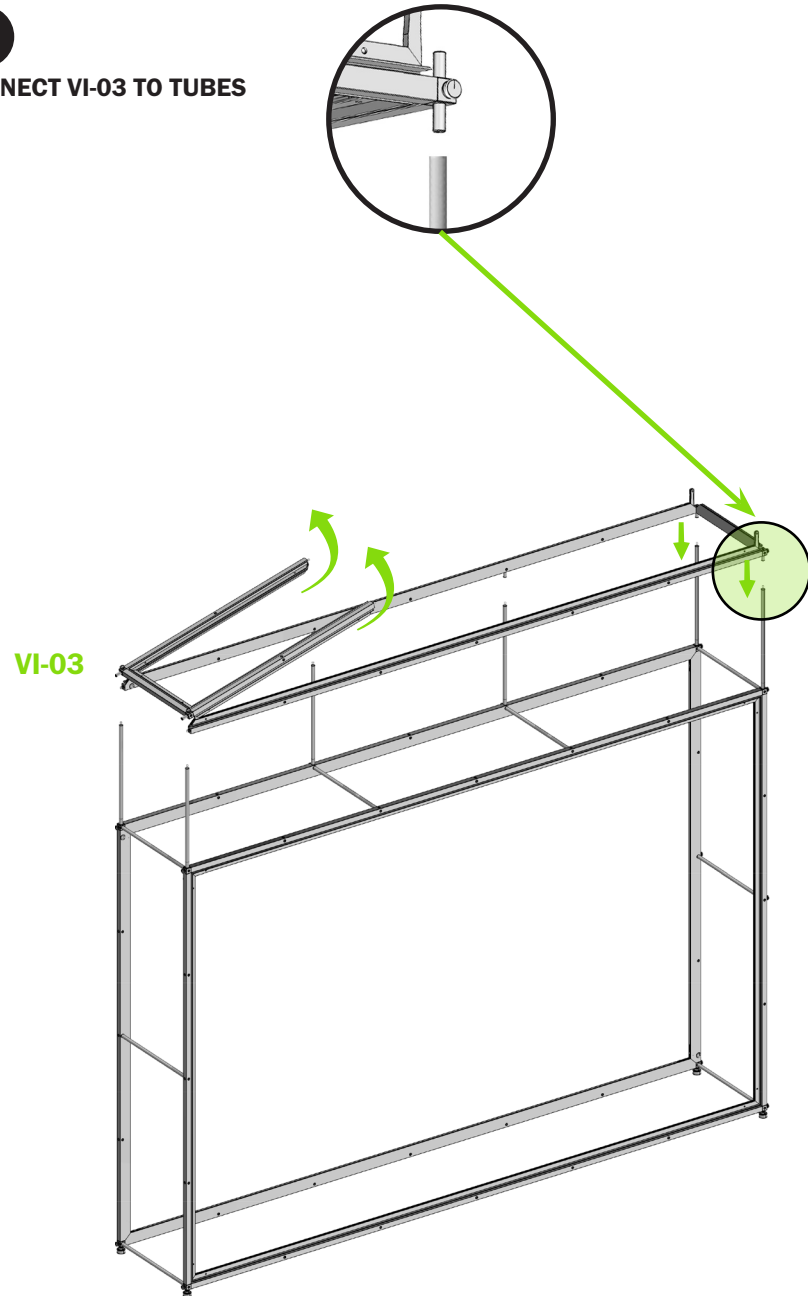

**5**


**1 CONNECT VI-04 FIRST**

**2 THEN LIFT FRAME**

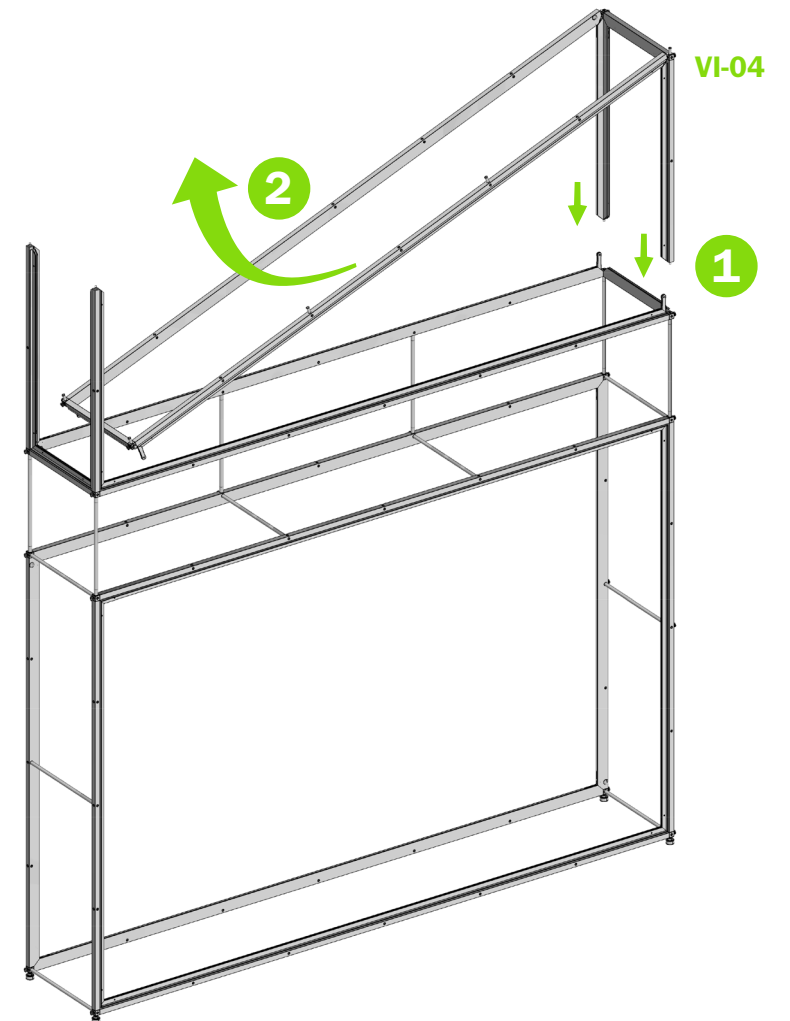


6

CONNECT CLIC TUBES  
MAGNETICALLY WITH FRAME

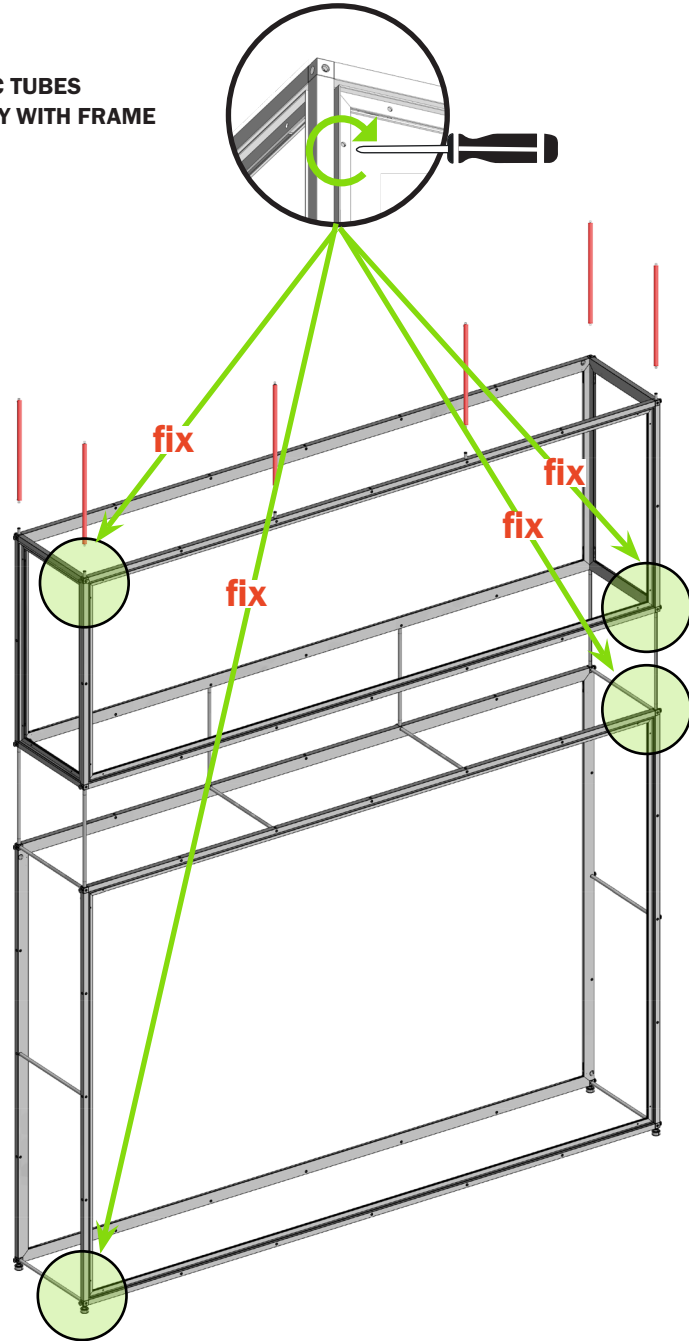


7

CONNECT CEILING PROFILE TO TUBES  
MAGNETICALLY

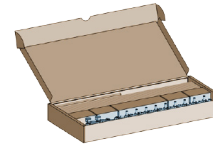


**MATERIAL BOX MIT:**  
clic Würfeln,  
Höhenverstellern  
Rohren A600 x ø10 mm  
Rohren A300 x ø10 mm

A300 mm

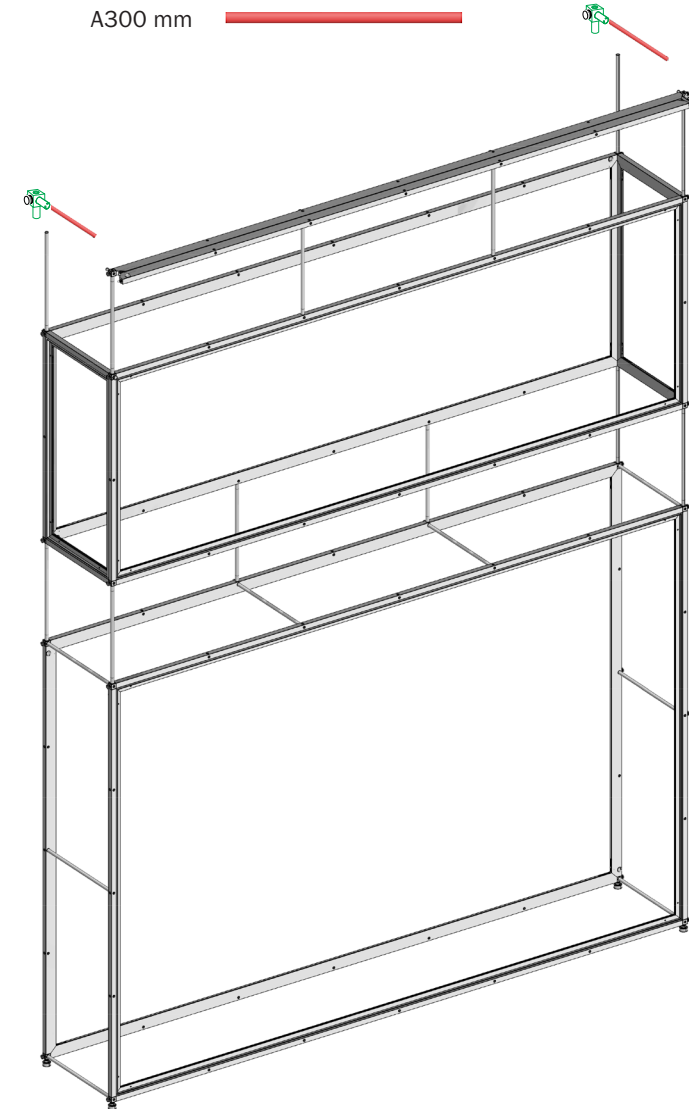


2 PIECES C

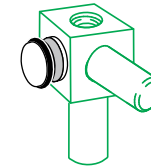




**8**

OPEN BOX 3

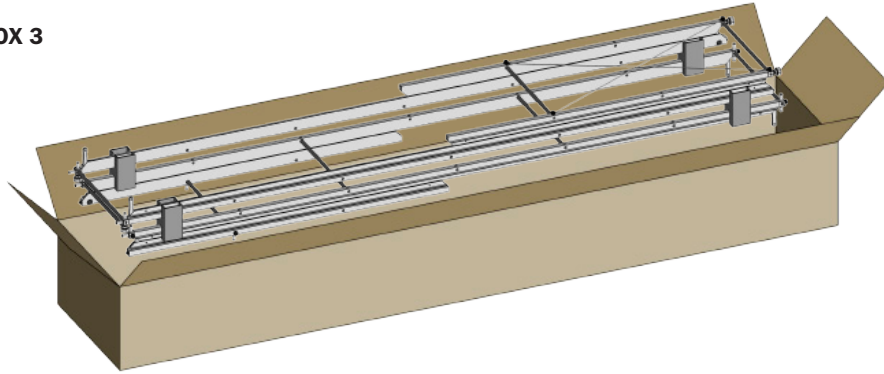

VI-05

VI-06

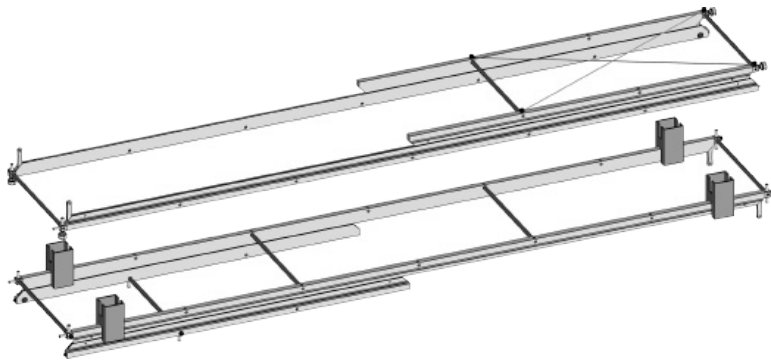


**9**

UNFOLD FRAME VI-05 / VI 06


VI-05

VI-06

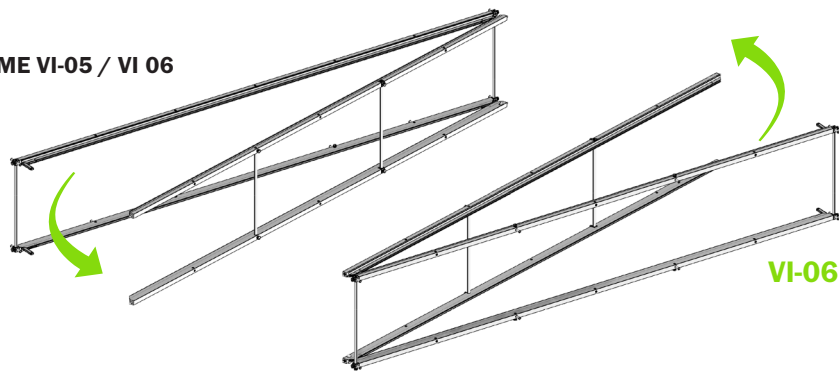


**10**

CONNECT FRAME VI-05 / VI 06

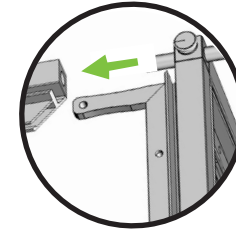

VI-06

VI-05


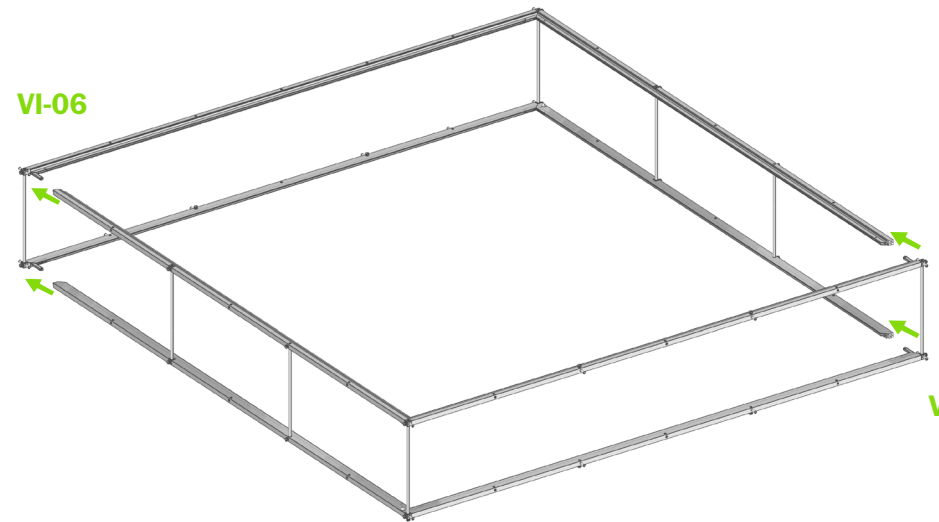


# VICTOR

## ASSEMBLING INSTRUCTIONS


11

CONNECT CLIC TUBES MAGNETICALLY  
WITH HEIGHT ADJUSTORS (CONNECTORS)

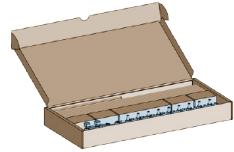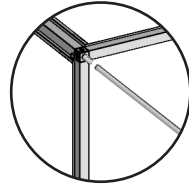

**MATERIAL BOX WITH:**  
clik cubes,  
height adjusters  
tubes A600 x  $\varnothing$ 10 mm  
tubes A300 x  $\varnothing$ 10 mm

A600 mm   
A300 mm 

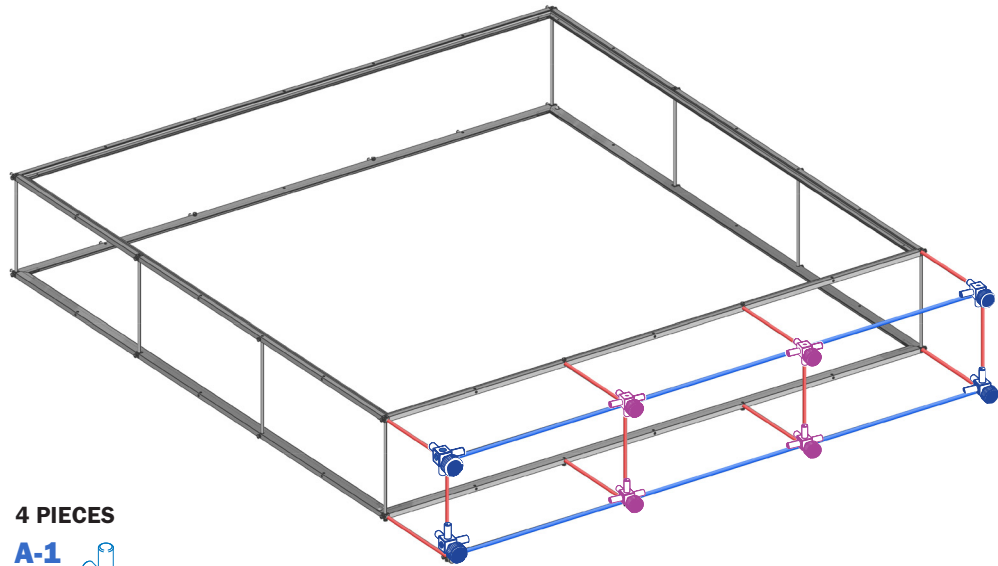

4 PIECES

A-1




4 PIECES

A 2





12

LIFT THE UNIT UP

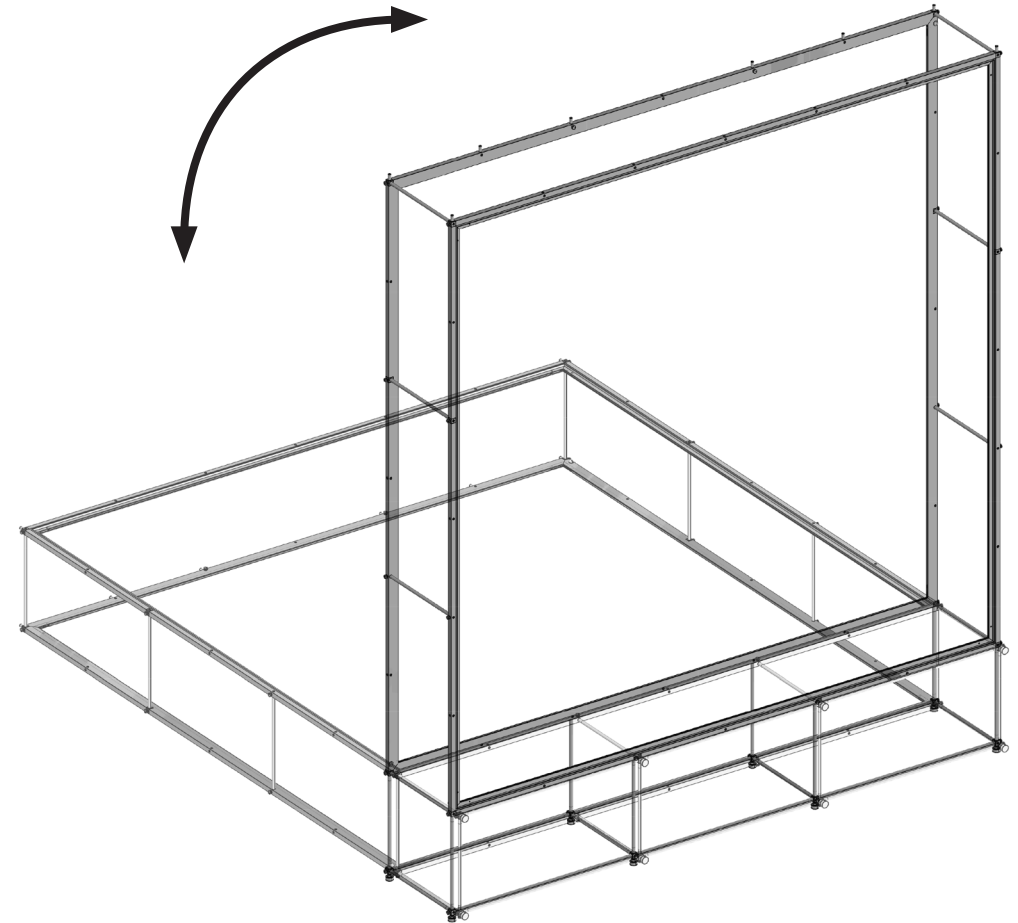

12

CONNECT CEILING PROFILE TO TUBES  
MAGNETICALLY

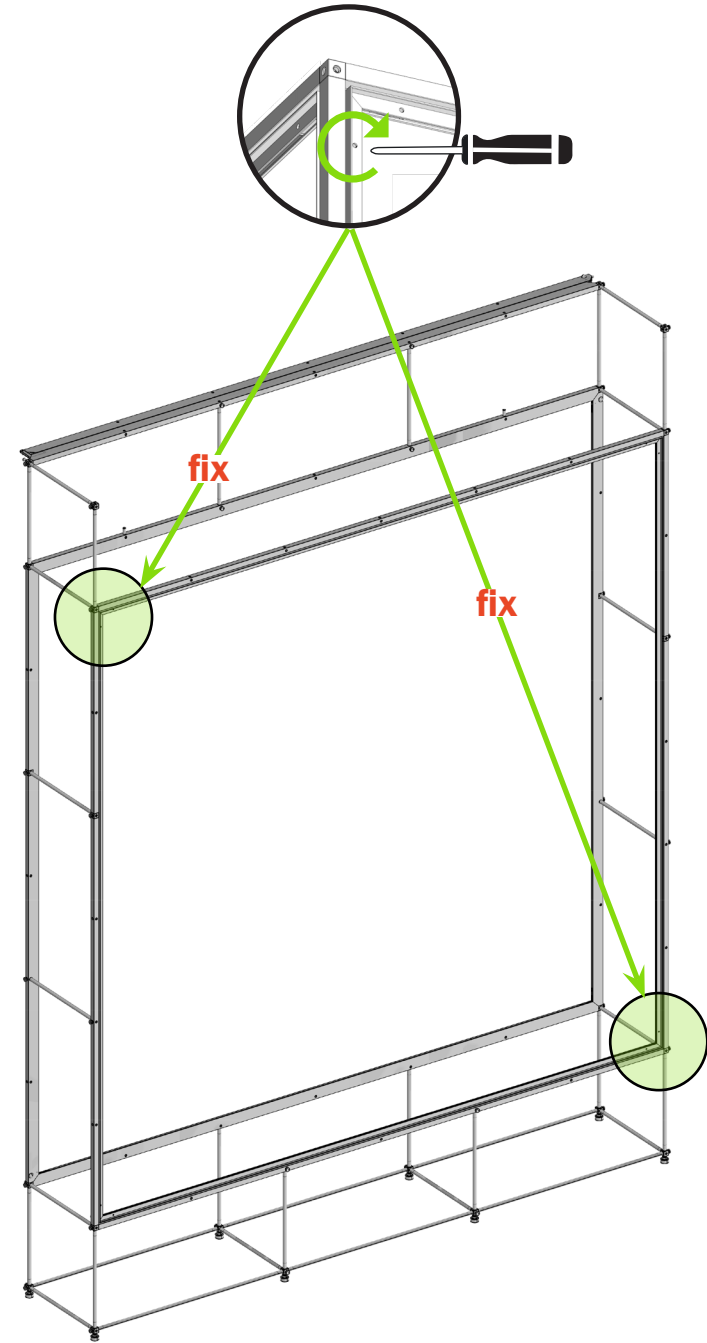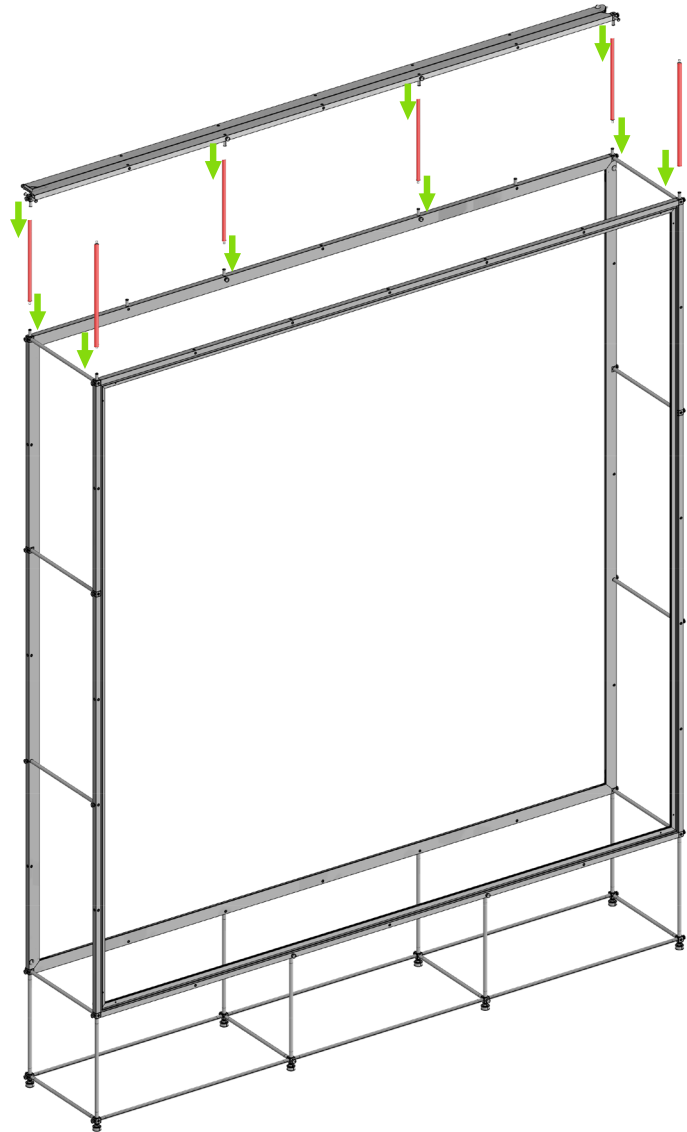




# VICTOR

## ASSEMBLING INSTRUCTIONS


**13**

**ADJUST HEIGHT  
BEFORE ASSEMBLING DIAGONALS**

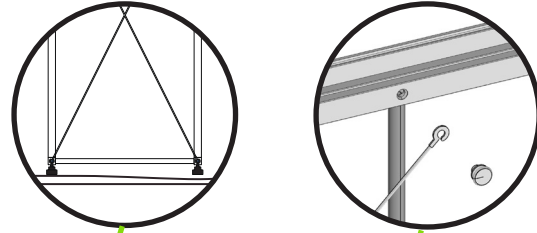


**14**

**TIGHTEN SCREWS  
AFTER ASSEMBLING  
ALL DIAGONALS**

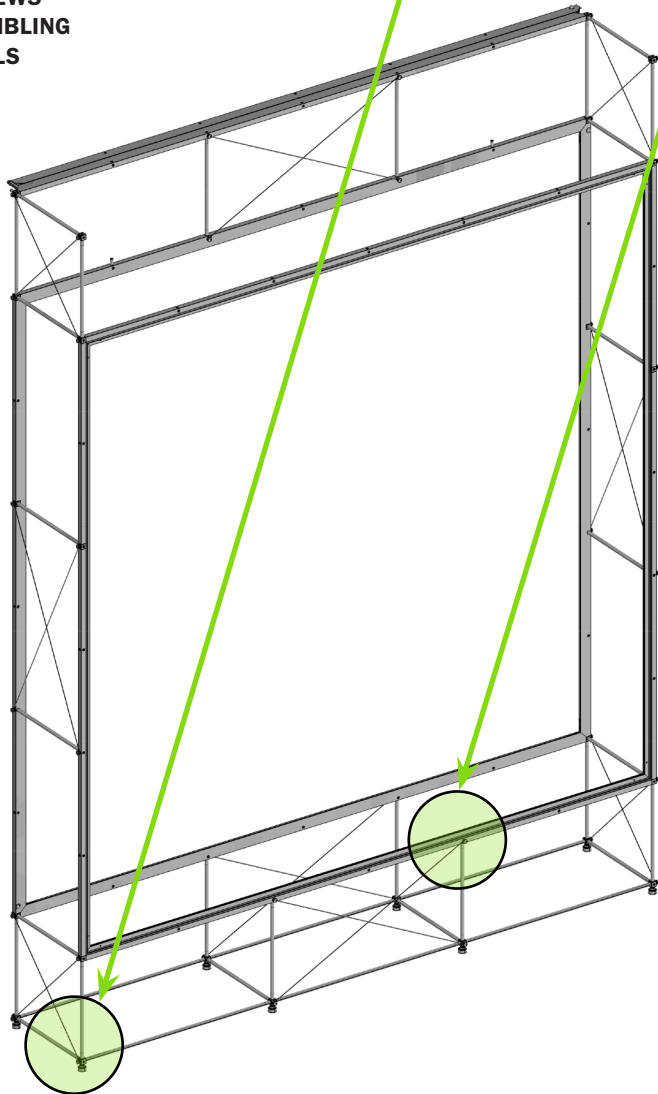

**15**

**ATTACH CEILING PROFILE  
AFTER POSITIONING THE UNITS**

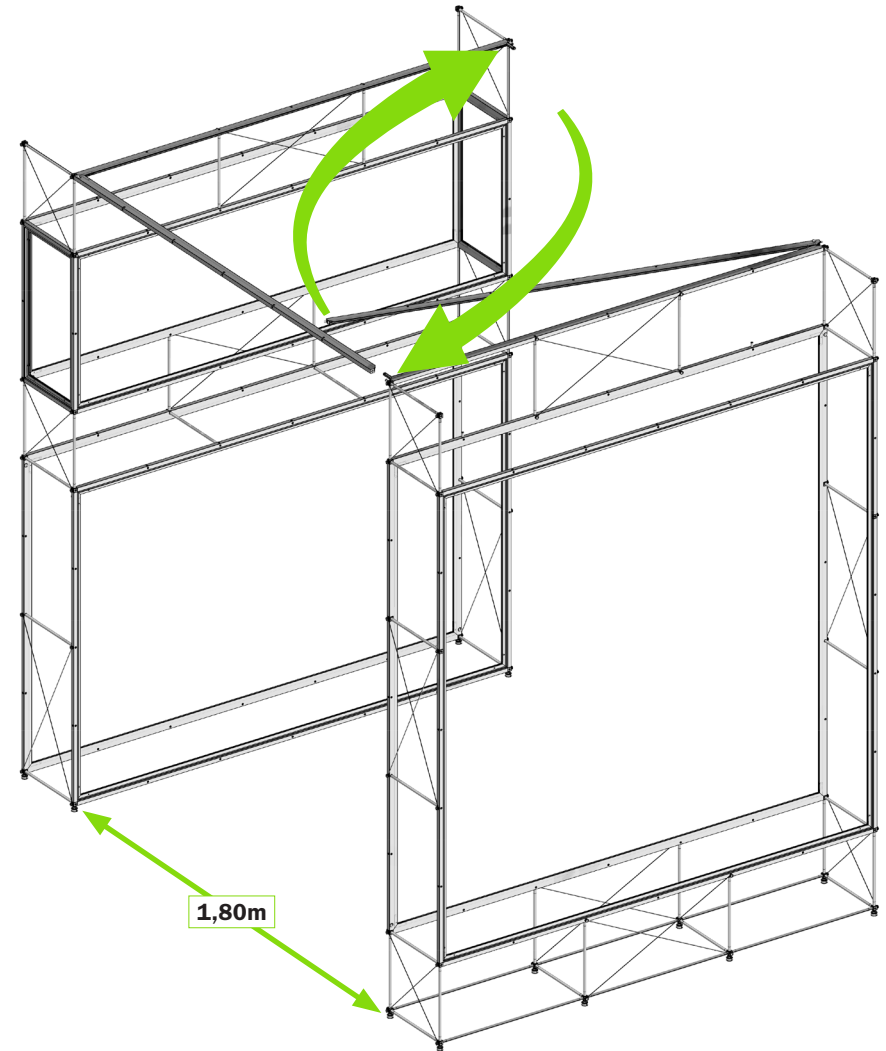


# VICTOR

## ASSEMBLING INSTRUCTIONS

16

EQUIPE THE UNIT


1 ASSEMBLE SHELVES

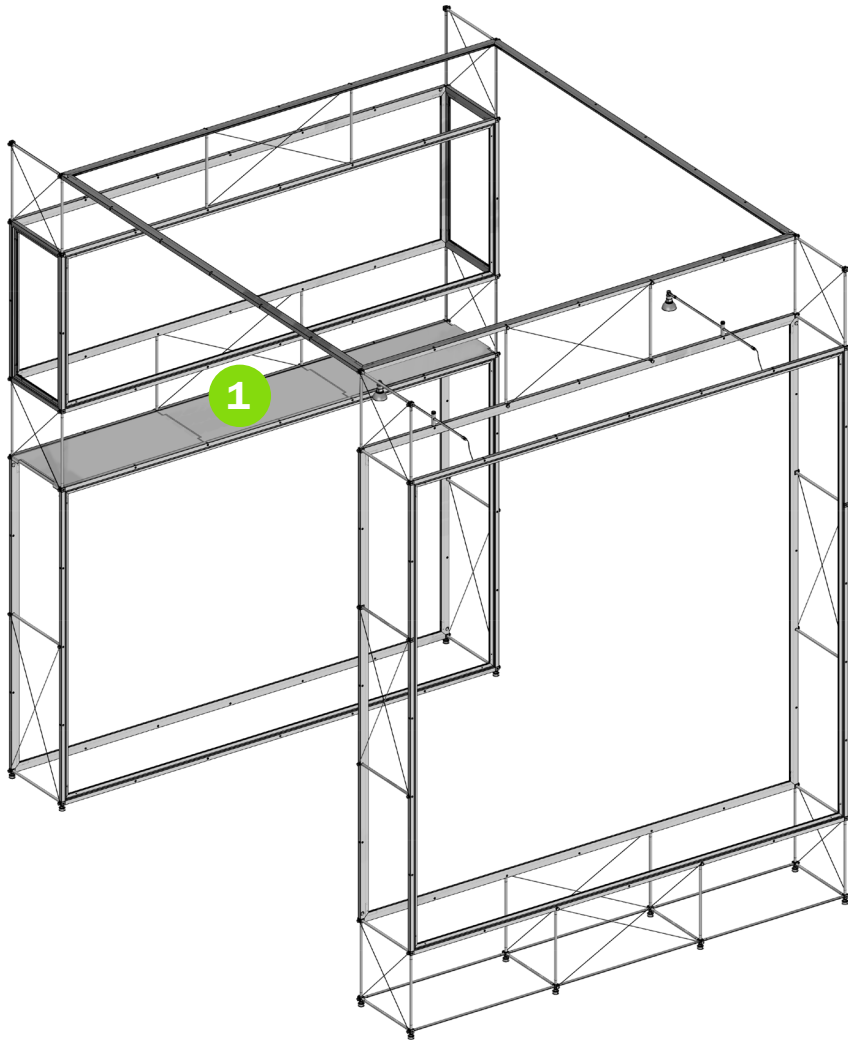

17

ATTACH FABRIC PANELS

- Attach top corners **1** and **2**
- Fix top edge and hang the fabric
- Attach corners **4** and **5**
- Put in fabric silicone in order of **6, 7, 8**

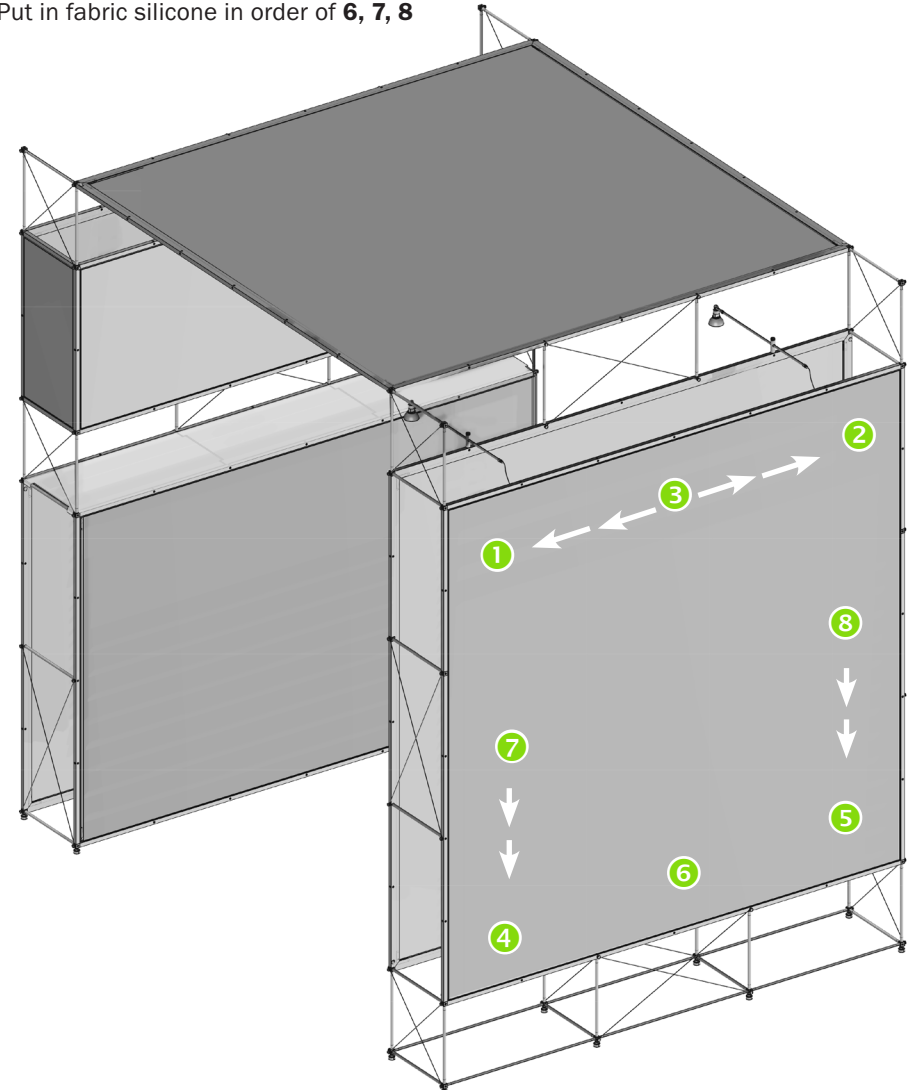

# VICTOR

## ASSEMBLING INSTRUCTIONS

---